Dificuldades com Acesso Remoto na 901 mini.



Caso queira modificar as configurações ou criar regras de acesso. Acesse SECURITY>SERVICE CONTROL

	Security	Application	Administra	ation	Help	
vall		ID Version	1Pv4			
ice Control		Enable				Portugi
ervice Control		Ingress		,	•	Help
	Sta	rt Source IP Address				ricip
Filter	En	d Source IP Address		-		Logout
		Mode	Discard	~		
		Service List	НТТР			
			TELNET			
	nable Ingress	Start Source IP	End Source IP	Mode	Service Modify	Delete
	J WAN	Address	Address	Discard	LIST HTTP TELN	T
E	nable Ingress	Start Source IP Address	Add End Source IP Address	Mode Discard	Service Modif List Modif	Y

Ao acessar este campo verifique as configurações já existentes descritas abaixo, para que não sejam criadas regras de acesso conflitantes ou antônimas.

- 1. Selecione se a regra de acesso será aplicada em IPV4 ou IPV6.
- Selecione se a regra de acesso será aplicada assim que for finalizada as configurações ou mais tarde. Essas configurações podem ser cambiadas mais clicando no desenho do lápis, abaixo de "Modify".
- 3. Em "ingress" selecione qual porta será a regra de acesso será aplicada.
- "Start Source IP Address" ou "End Source IP Address" configure o range que irá acessar. Caso não tenha configuração um IP especifico para configurar esta configuração pode ser deixada em branco.
- 5. Em "MODE" descreva se a configuração será para permitir ou bloquear acesso. Permit para permitir e Discard para bloquear.
- 6. Marque o serviço de acesso que será permitido ou bloqueado, HTTPS ou TELNET.



7. Clique em add para adicionar a configuração.

Após isto, você verá a nova configuração abaixo:

	Network	I S	ecurity	Application	Administra	tion	Help		
Firewall					Provide and the second	-			
Service Control				IP Version	IPv4	-			Portugi
Consider Control	-			Enable					
Service Conto	u		Char	t Course ID Address		-			Help
MAC Filter			Star	d Source IP Address		-			Logout
			En	Mode	Discard	~			
				Houe	HTTP				
				and the second second second second					
				Service List					
				Service List	TELNET				_
		Enable	Ingress	Service List Start Source IP Address	TELNET Add End Source IP Address	Mode	Service List	ModifyDele	te
		Enable	Ingress LAN	Service List Start Source IP Address	TELNET Add End Source IP Address	Mode Discard	Service List TELNET	ModifyDele	te
		Enable	Ingress LAN LAN	Service List Start Source IP Address	TELNET Add End Source IP Address	Mode Discard Permit	Service List TELNET HTTP	ModifyDele	te